	REMUVAL AND INS	STALLATION CLEAF	TANCE
PART/ASSEMBLY	DIMENSION*	DIRECTION	DESCRIPTION
TRANSMISSION	110.0 (4.33)	HOR I ZONAL	DISTANCE REQUIRED TO REMOVE TRANSMISSION
FILTERS	211.0 (8.31)	VERT I CAL	CLEARANCE REQUIRED FROM CONTROL MODULE FOR FILTER AND COVER REMOVAL
MAIN PRESSURE TAPS	38.0 (1.50)	PERPEND I CULAR	CLEARANCE REQUIRED BELOW CONTROL MODULE FOR PLUG REMOVAL
DRAIN PLUG	24.3 (.96)	VERT I CAL	CLEARANCE REQUIRED TO REMOVE WIRING HARNESS FROM SPEED SENSOR
SPEED SENSOR CONNECTOR	40.0 (1.57)	PERPENDICULAR	CLEARANCE REQUIRED TO REMOVE WIRING HARNESS FROM SPEED SENSOR
*	* TRANSMISSION	VIEWED FROM THE	SIDE





